


PLEASE READ ALL INSTRUCTIONS THOROUGHLY TO FAMILIARIZE YOURSELF WITH THE PROGRAMMING PROCEDURE BEFORE BEGINNING. SAVE THESE INSTRUCTIONS FOR REFERENCE WHENEVER YOU WISH TO CHANGE YOUR PERSONAL IDENTIFICATION NUMBER (PIN).

We recommend that you program your Wireless Keypad before mounting so that you can check for proper operation at the mounting location before permanently attaching to wall.

Before your Wireless Keypad will be able to operate the opener there are two programming steps that have to be completed.

FCC WARNING


To comply with FCC/IC rules, adjustment or modification of receiver and/or transmitter is prohibited. THERE ARE NO USER SERVICEABLE PARTS EXCEPT FOR BATTERY REPLACEMENT.

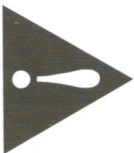

WARNING

Always keep moving door in sight and away from people and objects, until it is completely closed. NO ONE SHOULD CROSS THE PATH OF THE MOVING DOOR.

Never let children operate or play with door controls. Keep all controls away from children.

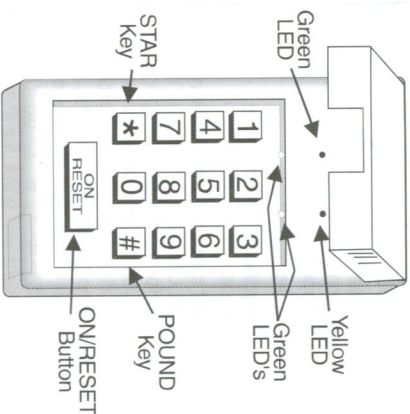

#1. Programming or Changing Personal Identification Number (PIN)

a. To start the programming, push the ON/RESET button. Two green LED lights will go on which indicate the unit has been activated and waiting for commands. These same green LED's help illuminate the keypad in the dark for easy reading. The Wireless keypad has an energy saving feature that will reset the unit to "standby" after 20 seconds, the green LED's will go out and the unit will shut down. If this happens while you are programming, simply start over again.

b. Press the Star (*) key. All key presses are confirmed by the yellow LED blinking once.

c. Enter the factory set, 4 digit system code **9 9 9 9**.

d. Press the Star (*) key. The yellow LED will flash three times to acknowledge that it is now in the programming mode.

e. Enter the 4-digit personal identification number (PIN) you wish to use.

f. Enter the number of door openers that your Model 02-3039U Wireless Keypad will be operating. (Between 1 and 4)

- 1 = Single door
- 2 = 2 doors
- 3 = 3 doors
- 4 = 4 doors

g. Press the Pound (#) key. The yellow LED should stay on for two seconds, then the Green LED will blink, and finally, the Yellow LED will flash 2 times indicating the new user code has been properly programmed into your Wireless Keypad.

NOTE: IF, AT ANY TIME, AN ERROR WAS MADE IN ENTERING THE CODES, SIMPLY PRESS THE ON/RESET BUTTON AND REPEAT THE ABOVE PROCEDURES.

#2 Programming the Model 02-3039U Wireless Keypad to work with the opener's built in receiver.

a. Activate the opener learning mode by pressing the PROGRAM SWITCH (SW) button, located on the Motor Head Unit, once. (If the Wired Deluxe Wall Station is installed, refer to your manual for activation using the alternative programming switch). The PROGRAM STATUS L.E.D. on the Motor Head Unit will light and remain lit, indicating that the receiver is ready to receive the radio transmitter code signal and learn its own security code.

b. Press the ON/RESET button to activate the keypad and enter ***9999*** (your personal 4-digit PIN) (number of doors) #. This will put the wireless keypad into the "teach mode". Now press the ON/RESET button and enter your personal 4-digit PIN. If your keypad is programmed for a single door, then the 4-digit PIN number is all that is needed to activate door.

(If your Wireless Keypad is being used for multiple doors, enter your 4-digit personal identification number (PIN) PLUS the number of the door you are activating, [e.g. 1234 1]).

c. Repeat Step #2 for each door.

Summary of Above Instructions

1.	Press the PROGRAM SWITCH button on the Motor Head Unit
2.	Press ON/RESET (*9999*) (4-digit PIN) (no. of doors) #
3.	Press ON/RESET (4-digit PIN) (no. of doors, for multiple doors only)
4.	Check that the PROGRAM STATUS L.E.D. on the Motor Head Unit turned itself off.
5.	Press ON/RESET (4-digit PIN). Door should operate.

The PROGRAM STATUS L.E.D. on the Motor Head Unit should turn itself off, indicating it has learned the transmitter signal and will start its "roaming" security code system sequence.

NOTE: For multiple door installations, use your 4 digit Personal Identification Number (PIN) PLUS the door number you're activating, each time you use your Wireless Keypad. Make sure the Program Status LED is illuminated only on the opener to be programmed.

NOTE: If the Motor Head Unit is not learning the Wireless Keypad properly, repeat Step #2.