

## Instructions for Radio Control Operator Single Entry Transmitter, Mini Transmitter, Dual & Triple Entry Transmitters

**Read the following instructions thoroughly before using transmitter.**

This transmitter must be adjusted so that the coding switches match the coding switches on your present operating transmitters or receiver.

**FCC Regulation:** This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept an interference that may cause an undesired operation. Transmitter distance may vary due to circumstances beyond our control.

### INSTRUCTIONS FOR SINGLE ENTRY TRANSMITTER

#### 1. Remove the Transmitter Cover

Remove the access cover from the front of the transmitter by sliding the cover away from the top of the transmitter (Figure A). This will expose the battery and the dip switches. The code can now be changed using a small screwdriver.

#### 2. Setting the code

You may set your transmitter to any code you desire, but be sure the code you set matches on both your transmitter and receiver.

There are nine (9) dip switches, each of which can be placed in three different positions (+, 0, -). DO NOT set all switches in the same position, such as all +, all -, or all zero (Figure B). WARNING: No other adjustments should be made inside the transmitter.

Now that you have selected your personal code, replace the transmitter cover.

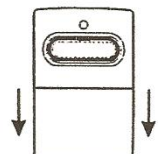


Figure A



Figure B

### INSTRUCTIONS FOR MINI TRANSMITTER

**IF YOU WILL BE USING A MINI TRANSMITTER (Figure A),** the Mini Transmitter will operate the same as the Single Entry transmitter.

**IMPORTANT:** Set the code on your Mini Transmitter to match your existing transmitter(s) exactly or it will not function.

#### 1. Remove the Transmitter Cover

Remove the screw from the back of the Mini Transmitter with a small Phillips screwdriver. Lay the transmitter down with the button facing up. Unsnap the top of the transmitter to access the coding switches.

#### 2. Set the Coding Switches

There are nine (9) dip switches, each of which can be placed in three different positions (+, 0, -). Set the switched in the Mini Transmitter to exactly match your existing transmitter(s). DO NOT set all switches in the same position, such as all +, all -, or all zero (Figure B). WARNING: No other adjustments should be made inside the transmitter.

#### 3. Replace the Transmitter Cover and Tighten the Phillips screw

**NOTE:** If the red light on the transmitter is dim or flickers when the transmitter button is pushed, the transmitter battery may be weak. Replace when necessary with a 12 volt Battery.

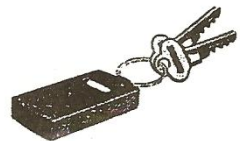


Figure A



Figure B