

**Programming KEP-IV to Opener**

**To program the KEP-IV to an Opener or to change an existing PIN:**

1. With new installations, it is recommended to program the KEP-IV before mounting to wall, otherwise proceed to Step 2.
2. Unit can be programmed with garage door in either up or down position.
3. Press the transmitter PROGRAM BUTTON on DoorMaster® light fixture, *idrive*®, *prodrive*®, Quantum® or Classicdrive® opener. LED will light or *idrive*® opener will beep once indicating that it is ready to learn a transmitter. (See Illustration on right)

The *idrive*® and *idrive*® Torsion opener will remain in the learn mode for 30 seconds. The DoorMaster® light fixture will remain in the learn mode for 30 seconds. The *prodrive*®, Quantum® or Classicdrive® opener will remain in learn mode for 60 seconds.

4. Open the cover of the KEP-IV, then push the ON/OFF/RESET button of the keyless entry. The Keyless Entry keypad will light indicating it has been activated and is waiting for commands (illumination may not be visible in direct sunlight.)

5. Press the desired four digit PIN number, then hold the "0" key until the door moves. (example:1-2-3-4-0). Release the "0" key. Programming is now complete.

**NOTE:** If at any time, an error was made in entering the codes, simply press the ON/OFF/RESET button and repeat the above procedures.

**NOTE:** One KEP-IV can be programmed to open multiple garage door openers. To program for additional openers, repeat steps 1 through 5 above except input a different four digit PIN number for each additional opener.

Only 1 PIN can be programmed to each garage door opener.

