



WIRELESS KEYPAD INTELLICODE® 1 MODE

To Operate Intellicode® 1 Openers:

This Wireless Keypad comes from the factory as an Intellicode® 2 unit. In order to initially program an opener or openers which are Intellicode®1, you must switch the Keypad to Intellicode®1 mode.

- After entering your PIN, Press .
- Press and hold  for two seconds and the GREEN LED above the number keys will turn RED.
- Close the Keypad cover.
- Follow the instructions on this page for programming your Intellicode® 1 opener(s).






Once all your doors have been programmed, there is no need to switch back and forth between Intellicode® modes. The Keypad will automatically remember the mode of each opener.

SECTION 1 BASIC PROGRAMMING FOR ONE DOOR INTELLICODE® OPENER

FOR CONVENIENCE

Program Keypad BEFORE mounting.

STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order   .
- Press .
- Enter your PIN (3 to 8 characters).
- Press .
- Close keypad cover and wait 30 seconds.




STEP 2: TEACHING PIN TO SINGLE OPENER

Find the Learn Code Button and Learn Code Indicator LED on your door opener.

- If your Door Opener has a black antenna wire and the serial number does not start with 10 or higher, the Learn Code Button and Indicator LED are located near the antenna. (The light lens may need to be opened. If you use an external receiver, it may need to be opened to access the Learn Code Button and Indicator LED.




- If your Door Opener *does not* have an Antenna, you have an External Receiver. The External Receiver cover must be removed to access the Learn Code Button and Indicator LED.

- Press the Learn Code Button.
 - Learn Code Indicator LED (on Opener) will blink.
- Enter your PIN and press  on Keypad.
 - Learn Code Indicator LED stays on.
- Press  again.
 - Learn Code Indicator LED turns off.
- Press  again.
 - Opener will run.

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING ONE DOOR OPENER

To open or close the Garage Door.

- Enter your PIN.
- Press .

NOTE

- If the Door does not move, check the red LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

For answers to questions, call 1-800-35-GENE, or visit www.geniecompany.com

The Genie Company, 22790 Lake Park Blvd., Alliance, Ohio 44601

Additional Genie® products can be ordered through your local Genie® Professional Dealer. To locate a dealer near you, call 1-800-OK-GENIE.






©2010 GMI Holdings, Inc. D.B.A.The Genie Company

SECTION 2 PROGRAMMING FOR 2 OR 3 DOOR INTELLICODE® OPENER

FOR CONVENIENCE

Program Keypad BEFORE mounting.






STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order   .
- Press .
- Enter your PIN (3 to 8 characters).
- Press .
- Close keypad cover and wait 30 seconds.

STEP 2: PROGRAMMING MULTIPLE DOOR OPENERS







All Door Openers will use the same PIN.

On your keypad:

- Enter your PIN and press .
- Press  again.
- Press the number of Doors (total) you wish to control ( or ).
- Press .

.....

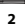Decide which Door will be Door #1, #2 and #3.

- Enter your PIN and press  on Keypad.
- Press the number you have picked for this Door Opener ( or  or ).
- Press and hold the  for 2 seconds.
- Press the Learn Code Button. (See Step 2 in Section 1.)
- Press  3 times.
 - Opener will run.





Repeat procedure below dotted line for each opener.

(Each Door Opener must be programmed to receive the signal from the Wireless Keypad).

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING MULTIPLE DOOR OPENERS

To open or close a Door after programming is complete.

- Enter your PIN.
- Press .
- Press Door Opener number ( or  or ).

WIRELESS KEYPAD INTELLICODE® 2 MODE

This page is for Intellicode® 2 Only:

If you have an Intellicode® 1 opener or openers, go to the reverse side of this instruction.

SECTION 1 BASIC PROGRAMMING FOR ONE DOOR INTELLICODE® OPENERS

FOR CONVENIENCE


Program Keypad **BEFORE** mounting.

STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order **3** **5** **7** .
- Press **PROGRAM** .
- Enter your PIN (3 to 8 characters).
- Press **PROGRAM** .
- Close keypad cover and wait 30 seconds.

STEP 2: PROGRAMMING SINGLE DOOR OPENER

Press and hold **PROGRAM** until both LEDs turn BLUE.

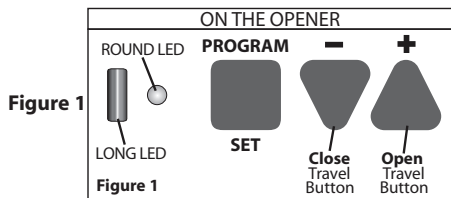

- Release button. Only round LED will be BLUE.
- Press **PROGRAM**, release again. Long LED should blink PURPLE.
- **On the Wireless Keypad**—enter your PIN.
- Press **UP**. LEDs will stay on solid.
- Press **DOWN** again. LEDs will turn off.
- Press **UP** again. Door opener should run.
- Press any key to stop opener. (It will automatically stop at the fully open or fully closed position.)

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING ONE DOOR OPENER

- A** To open or close the Garage Door.
- Enter your PIN.
 - Press **UP**.

NOTE

- If the Door does not move, check the LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

For answers to questions, call 1-800-35-GENE, or visit www.geniecompany.com

The Genie Company, 22790 Lake Park Blvd., Alliance, Ohio 44601

Additional Genie® products can be ordered through your local Genie® Professional Dealer. To locate a dealer near you, call 1-800-OK-GENIE.

©2010 GMI Holdings, Inc. D.B.A. The Genie Company

SECTION 2 PROGRAMMING FOR MULTIPLE DOOR INTELLICODE® OPENERS

FOR CONVENIENCE

Program Keypad **BEFORE** mounting.

STEP 1: CREATING YOUR WIRELESS KEYPAD PIN (PERSONAL IDENTIFICATION NUMBER)

- Press in order **3** **5** **7** .
- Press **PROGRAM** .
- Enter your PIN (3 to 8 characters).
- Press **PROGRAM** .
- Close keypad cover and wait 30 seconds.

STEP 2: PROGRAMMING MULTIPLE DOOR OPENERS

All Door Openers will use the same PIN.

On your keypad:

- Enter your PIN and press **PROGRAM** .
- Press **PROGRAM** again.
- Press the number of Doors (total) you wish to control (**2** or **3**).
- Press **PROGRAM** .

On your opener's power head:

- Select first opener and press and hold **PROGRAM** until both LEDs turn BLUE.
- Release button. Only round LED will be BLUE.
- Press **PROGRAM** and release again. LEDs should blink PURPLE.

Decide which Door will be Door #1, #2 and #3.

On your Wireless Keypad:

- Enter PIN and press **UP**.
- Press the number that you have picked for this door (**1** **2** or **3**).
- Press **UP** 3 times — opener will run.
- Repeat procedure below dotted line for remaining openers.

Wait until Keypad Backlight turns off (approximately 30 seconds).

STEP 3: OPERATING MULTIPLE DOOR OPENERS

Following programming—

On your Wireless Keypad:

- Enter your PIN.
- Press **UP**.
- Press the number of the door you wish to operate (**1** **2** or **3**).
- Press any key to operate the door.

NOTE

- If the Door does not move, check the LED on Keypad. If the LED is blinking rapidly, the PIN was entered incorrectly. After the LED stops blinking, re-enter your PIN and try again.
- Any Keypad Button will control the Door for 30 seconds after the Door starts moving.
- Rapid blinking of the red LED indicates an error. After a few seconds the LED will turn off. Start over.

Proceed to Section 3 - Mounting Instructions.

FCC and IC CERTIFIED

This device complies with FCC Part 15 and RSS 210 of Industry Canada. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which may be determined by turning the equipment OFF and ON, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiver antenna.
- Increase the separation between the opener and receiver.
- Connect the opener into an outlet on a circuit different from that to which the receiver is connected.
- Consult your local dealer.