

# INSTRUCTIONS FOR RADIO CONTROL OPERATOR SINGLE ENTRY TRANSMITTER MODEL C220/O220

## Read the following instructions thoroughly before using transmitter.

This transmitter must be adjusted so that the coding switches match the coding switches on your present operating transmitter or receiver.

**FCC Regulation:** This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: 1) This device may not cause harmful interference. 2) This device must accept an interference that may cause an undesired operation. Transmitter distance may vary due to circumstances beyond our control.

## INSTRUCTION FOR SINGLE ENTRY TRANSMITTER

### 1. Remove the transmitter cover

Remove the access cover from the front of the transmitter by sliding the cover away from the top of the transmitter (**Figure A**). This will expose the battery and the dip switches. The code can be changed using a small screwdriver.

### 2. Setting the code

You may set your transmitter to any code you desire, but be sure the code you set matches on both your transmitter and receiver.

There are 9 dip switches on your transmitter, each of which can be placed in three different positions(+,0,-). DO NOT set all switches in same position, such as all +, all -, or all zero (**Figure B**). **WARNING:** No other adjustments should be made inside the transmitter.

Now that you have selected your personal code, replace the transmitter cover.

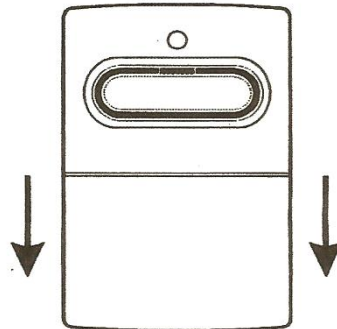


FIGURE A

 


FIGURE B

### **WARNING!**

Changes or modifications not expressly approved in writing may void the user's authority to operate this equipment.